

# **EK3104 User Manual**



www.edravn.com

## INSTRUCTIONS

Power on — Plug the interface into the USB interface of the device.

Power off — Pull the plug out of the device.

#### **KEY COMBINATION**

FN+F1 — Music

FN+F2 — Volume -

FN+F3 — Volume +

FN+F4 — Mute

FN+F5 — Stop

FN+F6 —Previous song

FN+F7 —Pause/play

FN+F8 — Next Song

FN + F9 —Mail

FN + F10 — Home

FN + F11 — Calculation

FN + F12 — Search

FN+WIN — Lock/Unlock WIN key

#### **LED MODES**

FN+Ins=3 different LED modes


FN+Home=4 different LED modes

FN+PqUp= 4 different LED modes

FN+Del= 4 different LED modes

FN+End= customization LED mode record

FN+PgDn= 4 different LED modes

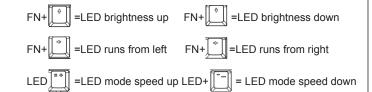

#### **SPECIFICATIONS**

Model: EK3104

Switch: Swap Outemu switch Backlight color: rainbow LED

Keycaps: double injection ABS keycaps Keyboard layout: US layout (104keys)

Connection: braided cable

Interface Type: USB with magnet ring

Operating Frequency: 16Mhz
Operating voltage: +5V ± 0.5V
Keyboard Weight: 1250g
Dimensions: 442\*145\*45 MM

Compatitable with Windows7/8/10 system/ios

### **PACKAGE CONTENTS**

1\*keyboard

1\*Manual

1\*keypuller

3\*switches