

100.00 mm



EDRA

EK387 User Manual



www.edravn.com

INSTRUCTIONS

Power on — Plug the interface into the USB interface of the device.

Power off — Pull the plug out of the device.

KEY COMBINATION

FN+F1 — Music

FN+F2 — Volume -

FN+F3 — Volume +

FN+F4 — Mute

FN+F5 — Stop

FN+F6 —Previous song

FN+F7 —Pause/play

FN+F8 — Next Song

FN + F9 —Mail

FN + F10 — Home

FN + F11 — Calculation

FN + F12 — Search

FN+WIN — Lock/Unlock WIN key

LED MODES

FN+Ins=3 different LED modes

FN+Home=4 different LED modes

FN+PgUp= 4 different LED modes

FN+Del= 4 different LED modes

FN+End= customization LED mode record

FN+PgDn= 4 different LED modes

FN+=LED brightness up FN+=LED brightness down

FN+=LED runs from left FN+=LED runs from right

LED =LED mode speed up LED = LED mode speed down

SPECIFICATIONS

Model: EK387

Switch: Swap Outemu switch

Backlight color: rainbow LED

Keycaps: double injection ABS keycaps

Keyboard layout: US layout (87keys)

Connection: braided cable

Interface Type: USB with magnet ring

Operating Frequency: 16Mhz

Operating voltage: +5V ± 0.5V

Keyboard Weight: 1100g

Dimensions: 365*145*45 MM

Compatitable with Windows7/8/10 system/ios

PACKAGE CONTENTS

1*keyboard

1*Manual

1*keypuller

3*switches

120.00 mm